

UAS Certification Application Procedure Operation Manual

<UAS Certification Application Sheet> 02. UAS Certification Attribute Change Method



Table of Contents

01. Introduction (For Those Wishing to Change the Attributes of the	• • • • • • • • p.02-2
UAS Certification)	
02. Precautions for Using the Drone Information Platform System	• • • • • • • • p.02-3
03. Necessary Items for Attribute Changes in UAS Certification	• • • • • • • • p.02-4
04. Step to Change Attributes in UAS Certification	• • • • • • • • p.02-5
05. Step 1: Log In to the Drone Information Platform System	• • • • • • • • p.02-6
06. Step 2: Proceed to the UA List Screen	• • • • • • • • p.02-9
07. Step 3: Proceed to UAS Certification Change screen	• • • • • • • • p.02-10
08. Step 4: Implement Attribute Changes to UAS Certification	• • • • • • • • p.02-11
09. Step 5: Check Changes	• • • • • • • • p.02-12



01. Introduction (For Those Wishing to Change the Attributes of the UAS Certification)

- In the Drone Information Platform System, you can apply for issuance of UAS Certification, change attributes, renew the application, apply for cancellation, withdraw the application, check the application status, request an application for issuance for a skill certificate to representative, and request a representative for other than an application for issuance of UAS Certification.
- This manual describes how to operate the Drone Information Platform System, so please refer to this when carrying out necessary procedures.
- In addition to this manual, please refer to the <u>FAQ</u> page on the Drone Information Platform System for a deeper understanding of the system.



02. Matters that require attention when using the Drone Information Platform System

- If the operation of the Drone Information Platform System is suspended (inactive state) for 60 minutes or longer, you will be required to restart the process. This security function lowers the possibility of a third party viewing your screen and leaking your personal information while you are away from your computer or smartphone.
- If you are unsure of what information to enter in each of the forms or how to enter it, hover your cursor over the mark next to the field name in the form, to see the information to be entered, as well as a description of the input information to be entered in the form. (If you are using a smartphone, tap on it to display the description.)
- Do not press any browser buttons, such as "Back" or "Refresh", while using the system.
 Doing so may affect the normal functioning of the system.
- Do not attempt simultaneous login from multiple terminals; this may cause the system to malfunction.
- For the unmanned plane registration system, the new system for achieving Level 4, and other rules of flight,
 refer to the Ministry of Land, Infrastructure, Transport and Tourism website

*Click on the link to open the external site.



03. Necessary Items for Attribute Changes in UAS Certification

Prepare the following information to change the attributes of UAS Certification.

Various information	ltem
Contact information	 Full name Phone Number E-mail address Home Address/Address of the person



04. Step to Change Attributes in UAS Certification

Make your attribute changes using the following steps in the Drone Information Platform System.

Start the attribute changes in UAS Certification

Step 1: Log in to the Drone Information Platform System

Enter your login ID and password to log in to the Drone Information Platform System.

Step 2: Proceed to the UA List Screen

Select the Changes to UAS Certification button in the main menu.

Step 3: Proceed to UAS Certification Change screen

Select the application information whose attributes you want to change for UAS Certification from the model list screen.

Step 4: Implement Attribute Changes to UAS Certification

UAS Certification Enter the content to change on the change screen.

Step 5: Check Changes


Confirm the information that you entered, and apply.

Attribute changes of the UAS Certification are completed.

This completes the Attribute Changes.



05. Step 1: Log in to the Drone Information Platform System (1/3)

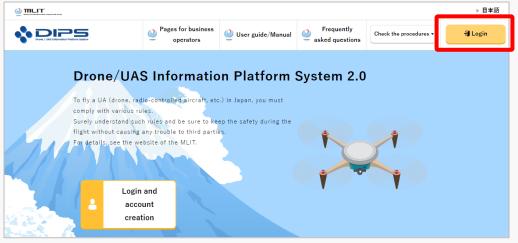

Log In

If you have opened an account

Loginid

Password

If you have forgotten your login ID.Click harse
If you have forgotten your password.Click harse
Log In

Back

Access to the DIPS2.0 top page.

(https://www.ossportal.dips.mlit.go.jp/portal/top/)

Click the "Login" button.

On the Log In page, enter your ID and password (set up when opening the account) and press the "Log In" button.


Points to note!

You need a Drone Information Platform System account to log in. If an account has not been set up, then open an account first.


*The login ID is 3 letters + 6 numbers. (Example) ABC123456



05. Step 1: Log in to the Drone Information Platform System (2/3)

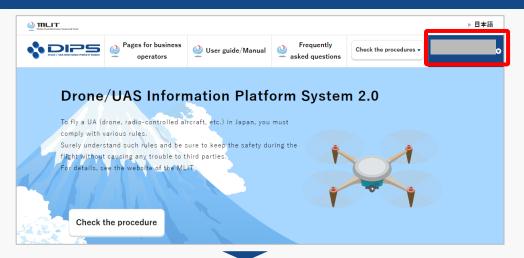

Upon successful login, the name of the registered account will appear in the upper right corner of the "DIPS2.0" portal screen.

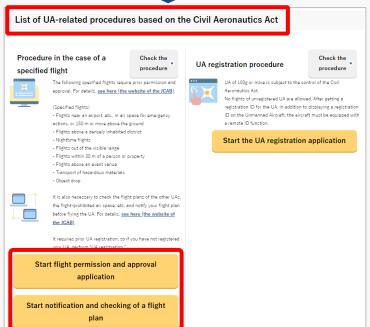

Scroll down the screen and go to the appropriate procedure by clicking on the various procedure buttons in the "List of UA-related procedures based on the Civil Aeronautics Act".

Please see the next page for buttons for various procedures.




05. Step 1: Log in to the Drone Information Platform System (3/3)


The buttons for the various procedures in the "List of UA-related procedures based on the Civil Aeronautics Act" are shown below.

Clicking the buttons for the various procedures will take you to the top page of the individual procedures.


Procedure in the case of a specified flight

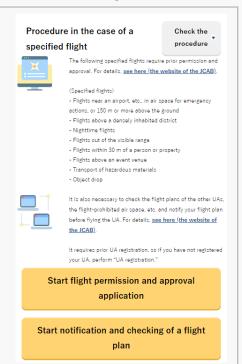


UA registration procedure

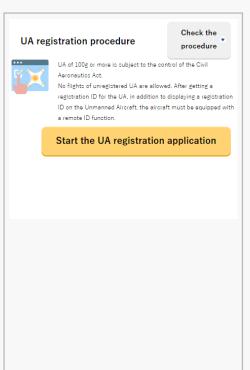

Procedures in the event of an accident, etc. related to a UA

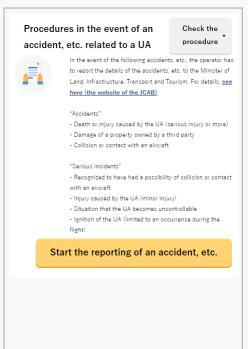


Acquisition procedure of UAS Certification and UA remote pilot certification

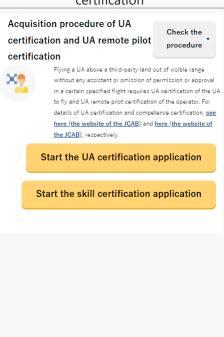




06. Step 2: Proceed to the UA List Screen

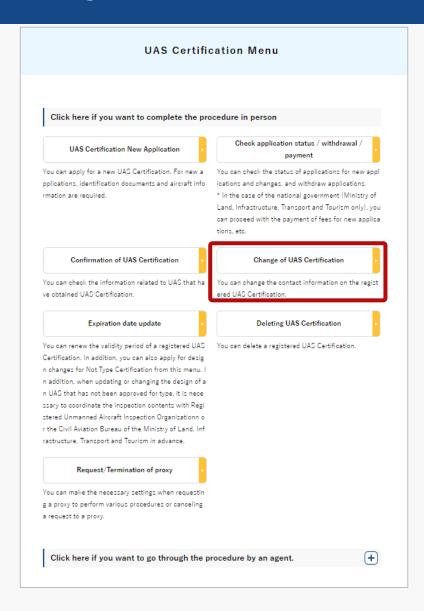

Press the "Change of UAS Certification" button in the UAS Certification Menu page.




07. Step 3: Proceed to UAS Certification Change screen

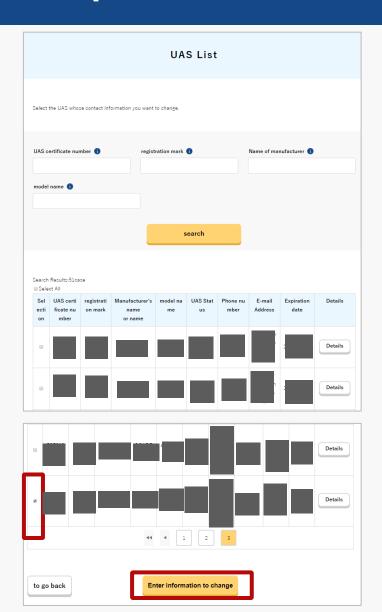

Select the application information whose attributes you want to change for UAS Certification from the model list screen, and press the "Enter information to change" button.




08. Step 4: Implement Attribute Changes to UAS Certification

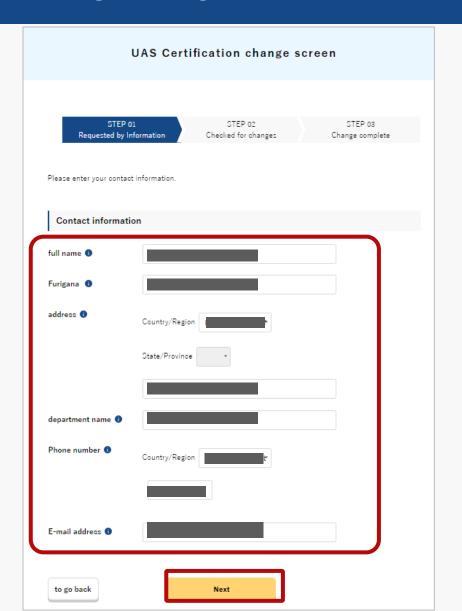

On the UAS Certification change screen, enter the content to change in the Contact information and press the "Next" button.



09. Step 5: Check Changes (1/2)

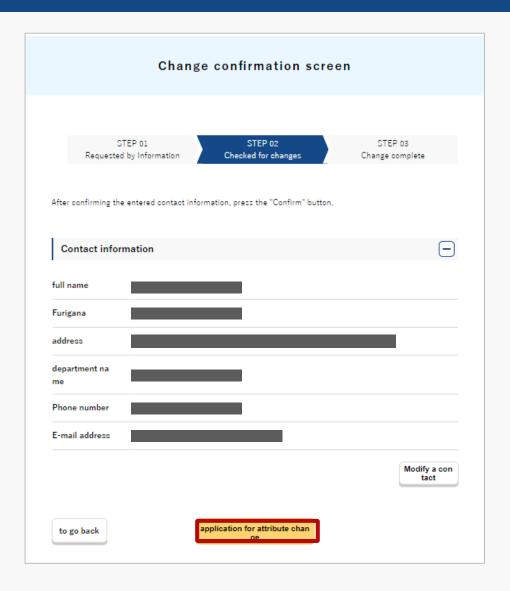

Confirm the contact information that you entered.


If there is an error in the content you entered, press the "Modify a contact" button to correct the information.

If there is no problem with the content you entered, press the "application for attribute change" button.



09. Step 5: Check Changes (2/2)



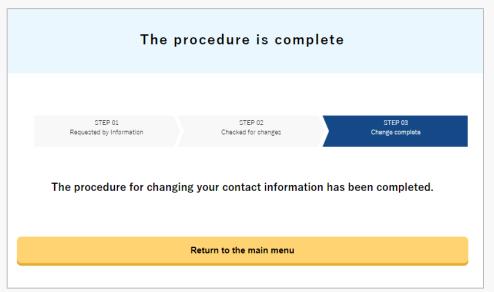

The confirmation screen for changing contact information displayed. If there is no problem, press the "application for attribute change" button.

When you press the "application for attribute change" button a message indicating that the application is complete is displayed. This completes the changes.

Points to note!

The following items can be checked only on the DIPS2.0 screen.

These items are written in Japanese in the e-mail you receive during the procedure.

- Type of application
- Class of UAS certification
- Status after change